

## ***XTZ Room Analyzer with Windows Vista***

As Microsoft has omitted the possibility to adjust the output volume level from within software applications, this has to be done manually. Simply double click on the speaker icon down to the right, the sound mixer will pop up. Next, go to the RTA section in the Room Analyzer and click Measure, and a XTZ icon appears in the mixer dialogue. Manually increase the volume.

